

1 81-2015N



2 81-2015P







4 81-2015A




5 81-2015G



6 81-2016F



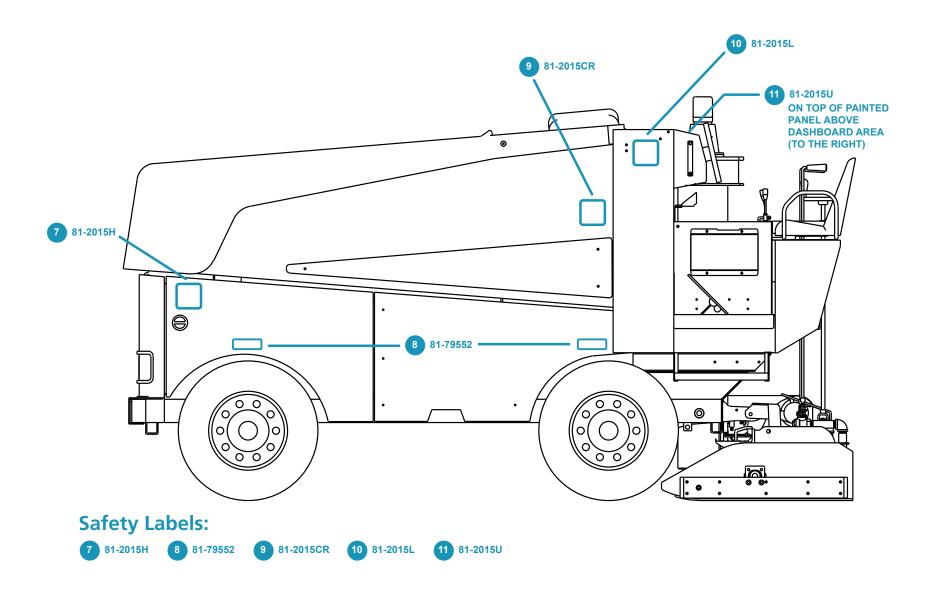





8 81-79952

80 psi / 550 kPa 81-79552





10 81-2015L




11 81-2015U

SAFETY INSTRUCTIONS

- Read operation manual and view video before using this machine.
- Keep all shields and guards in place.
- 3. Keep unauthorized persons off the ice when the machine is operating.
- . Use care when backing
- 5. Stop motor and wait for all movement to stop before cleaning or making any adjustments and repairs.
- 6. Before leaving the operator's position:
- Shift directional level to neutral.
- Stop all hydraulic operations.
- Set parking brake.Turn key switch off.
- Remove key from key switch.

-0015U EN

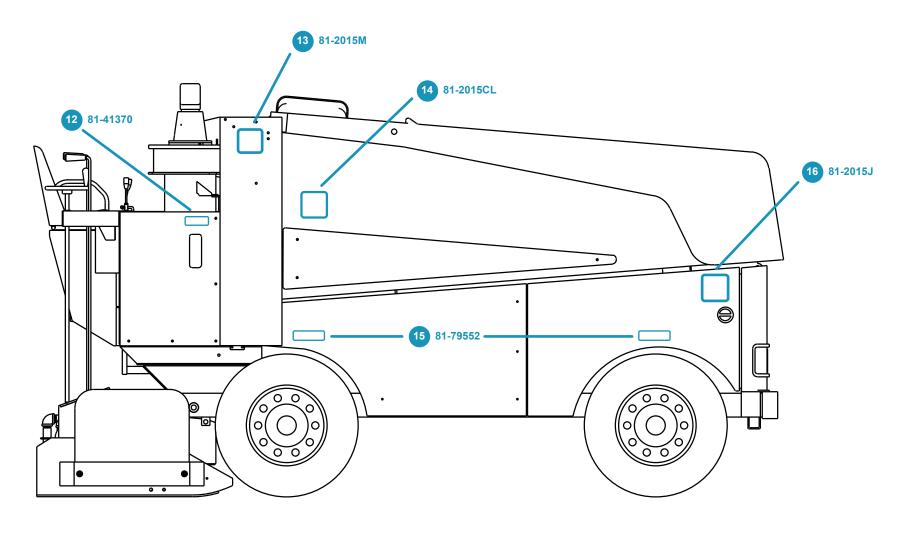

12 81-41370 13 81-2015M

14 81-2015CL

15 81-79552 16 81-2015J
















80 psi / 550 kPa 81-79552





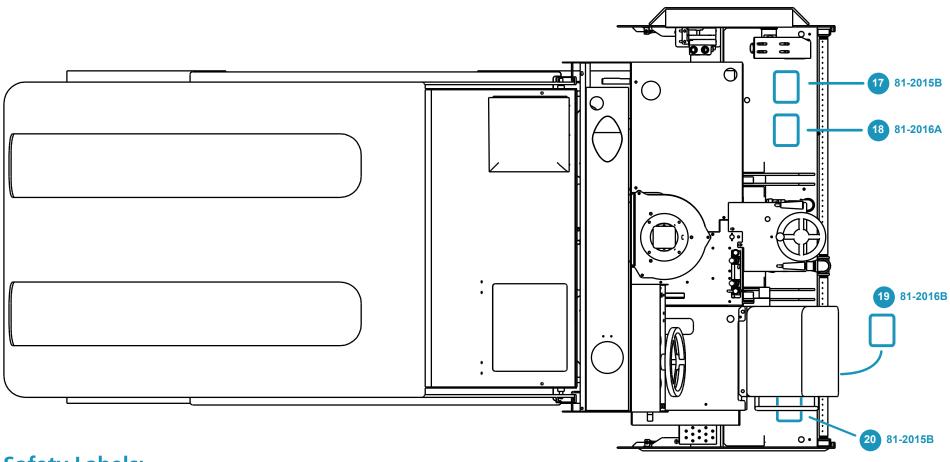



18 81-2016A

19 81-2016B

20 81-2015B




















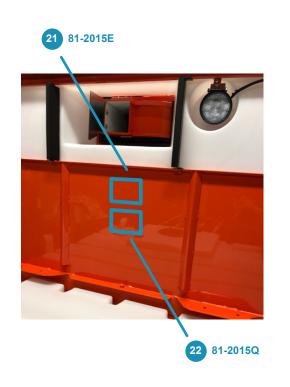

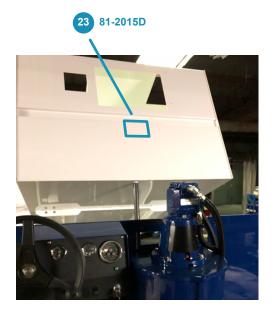

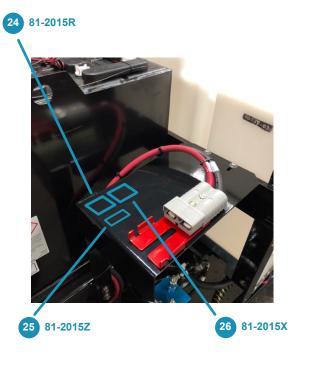

















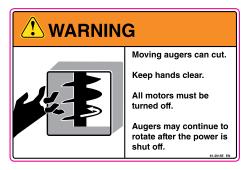




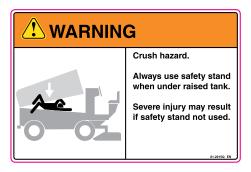







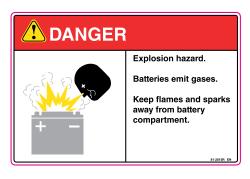





Improper battery operation and service will void battery warranty.

Refer to the operation manual for correct battery operation and service procedures.

81-2015Z EI




SAFE OPERATING PROCEDURES

- Electric controls are to be serviced by authorized personnel only.
- 2. Shut off charger before connecting or disconnecting batteries.
- 3. Disengage battery connectors from machine connectors before attempting any service to motors or electric controls.
- 4. Charge batteries in a well-ventilated area.

81-2015X E

* For European Models review alternate layout on page 11

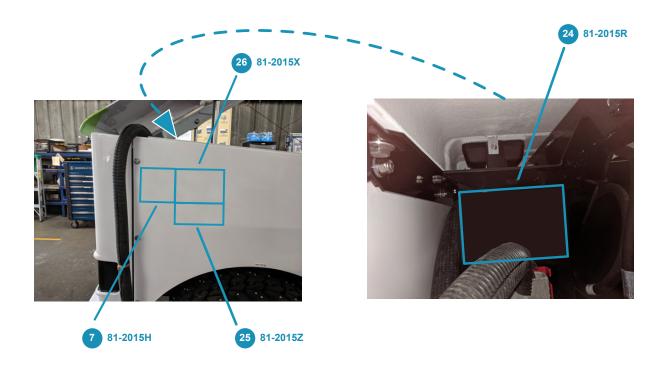






26 81-2015X

Safety Labels (European Models)







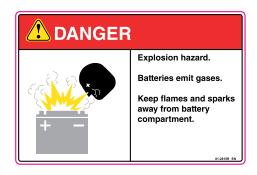



NOTICE

Improper battery operation and service will void battery warranty.

Refer to the operation manual for correct battery operation and service procedures.


81-2015Z EN



SAFE OPERATING PROCEDURES

- 1. Electric controls are to be serviced by authorized personnel only.
- 2. Shut off charger before connecting or disconnecting batteries.
- 3. Disengage battery connectors from machine connectors before attempting any service to motors or electric controls.
- 4. Charge batteries in a well-ventilated area.

81-2015X E

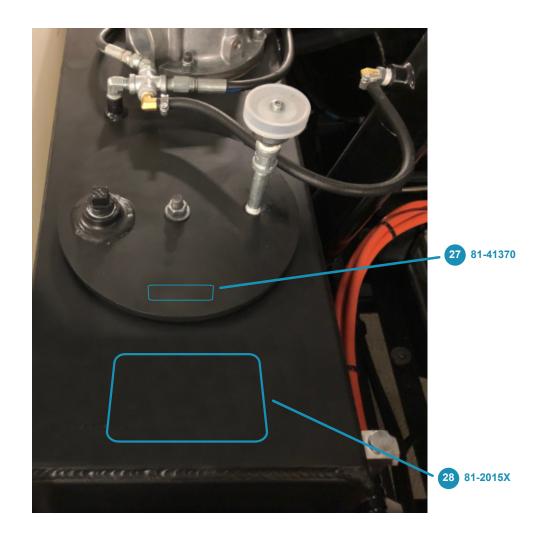

Safety Labels (Model 450 only)







SAFE OPERATING PROCEDURES

- Electric controls are to be serviced by authorized personnel only.
- 2. Shut off charger before connecting or disconnecting batteries.
- 3. Disengage battery connectors from machine connectors before attempting any service to motors or electric controls.
- 4. Charge batteries in a well-ventilated area.

01-2015Y E