





2 81-2015A












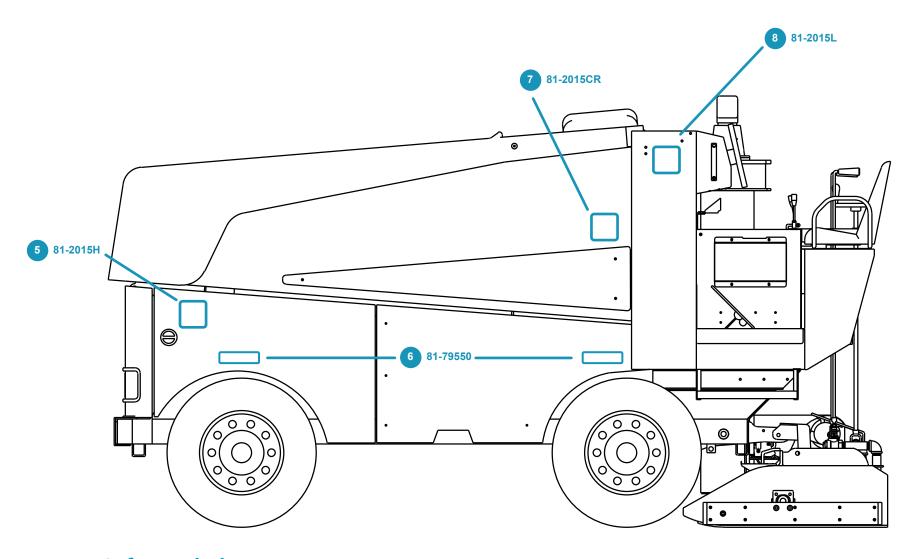



6 81-79550



8 81-2015L

5 81-2015H



6 81-79950












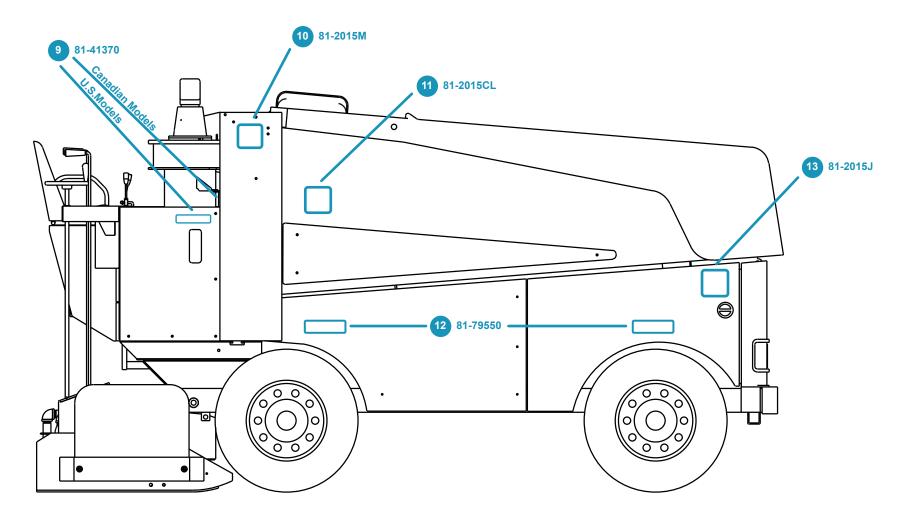



11 81-2015CL

12 81-79550

13 81-2015J

9 81-41370














75 psi / 500 kPa

13 81-2015J



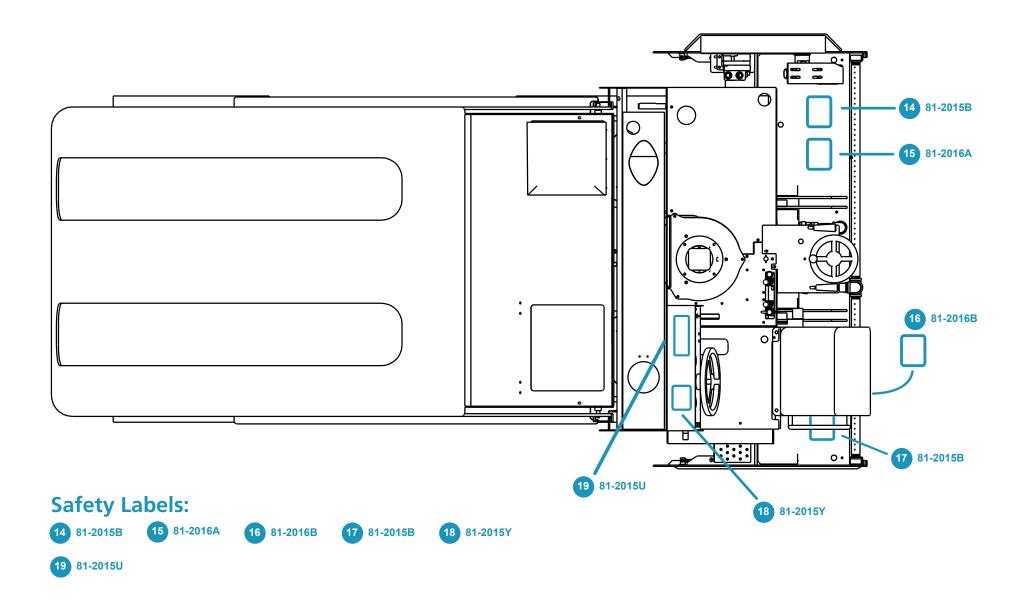

14 81-2015B




15 81-2016A




16 81-2016B



17 81-2015B

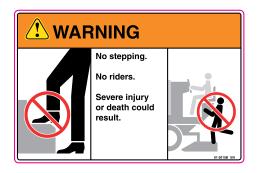


18 81-2015Y

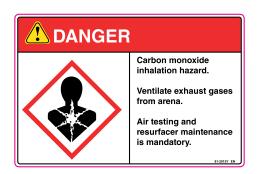

19 81-2015U

SAFETY INSTRUCTIONS 1. Read operation manual and view video before using this machine. 2. Keep all shields and guards in place. 3. Keep unauthorized persons off the ice when the machine is operating. 4. Use care when backing. 5. Stop motor and wait for all movement to stop before cleaning or making any adjustments and repairs. SAFET OF THE WARD OF TH

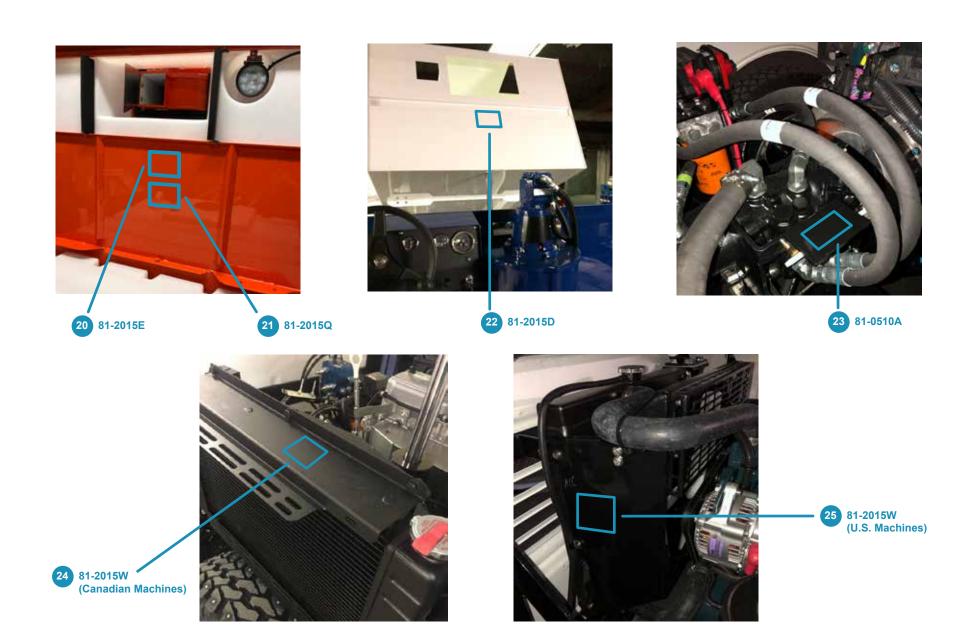



21 81-2015Q




23 81-0510A




25 81-2015W



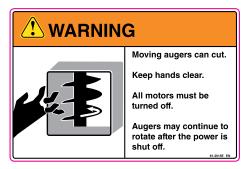



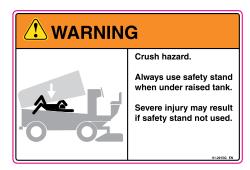







EMERGENCY USE ONLY

IF ENGINE WILL NOT **OPERATE**

Open red bypass valve 3 turns to move vehicle.

WARNING:

Valve must be closed for normal use or transmission damage may occur. Torque to 15 lb·ft (20 N·m).

